



Steno Rest Wrist Support Instructions

1. Insert the pipe of the wrist rest into the "lock clamp" pipe and tighten the screw

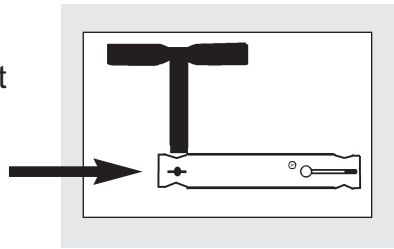


2.

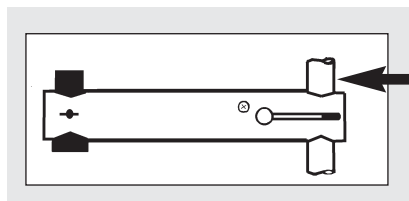

Place the opening of the "lock clamp" around the tripod and lock the clamp.

LOCK CLAMP INSTRUCTIONS

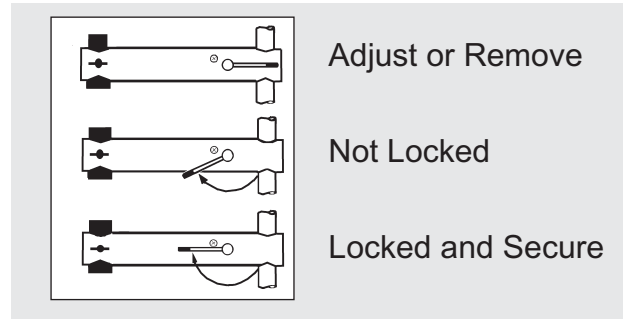

1-800-631-6989 • Fax: 1-800-631-2329
sales@pengad.com
www.pengad.com

Pengad
Inc.